RFM22 Shield Landing Page

Skill Level: 🖈 Beginner

Overview:




The RFM22 shield is an Arduino-compatible shield which provides a means to communicate with the HOPERF RFM22 radio transceiver module. What does THAT mean? It means you can use the RFM22 shield to add wireless communications to your Arduino projects.

This tutorial will give you the information you need to assemble your shield and start using it.

Requirements:

You'll need at least two RFM22 modules to set up communications- the RFM22 is not compatible with other wireless modules on the market, such as XBee, Bluetooth or the RFM12. You'll also need to make sure that your kit is complete- check the list below to see if all the necessary parts came in your package:

- 1 x pre-assembled RFM22 shield PCB. Compare to the picture above to make sure everything is in the right place.
- 2 x long-pin 1x8 female headers
- 2 x long-pin 1x6 female headers
- 1 x 5" wire (22ga solid)

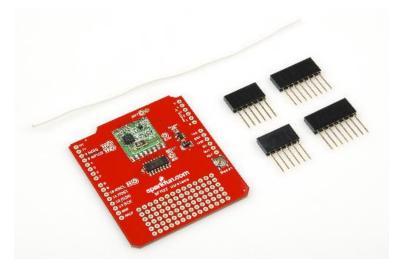


If you find that anything's missing, drop our customer service folks an email and they'll help you out.

Next, you'll need to pull together the various tools that you need for assembly. All you need to provide is a wire stripper, a soldering iron, and some solder. You may find it handy to have a third hand tool or vise to hold the board steady while you solder. Our beginner's tool kit has everything you need in one place.


Assembly:

Assembly of the RFM22 shield is quite easy. The hardest part is getting the headers perpendicular to the board such that the shield plugs easily into Arduino boards, and other shields can be plugged in on top of it.


Start by placing the four header strips in the appropriate locations, by number of pins. The male pins should be sticking out on the side of the board with no components, and the female sockets should be visible when looking down at the component side. NB: at this point, if you have a known-good Arduino shield, you can plug it into the female side of the headers to hold them at a favorable angle and skip straight to soldering all the connections down. Be careful if you do that, though, because a small alignment error in the "good" shield will become a much larger error on the one you're soldering to now!

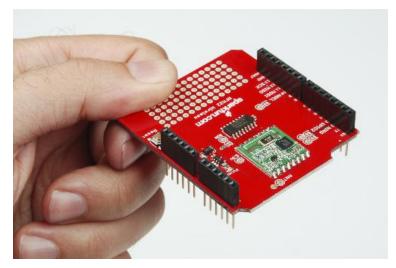


Flip the board over so the male pin side is up. This is the tricky part- the headers have a tendency to rock left to right, so that the end up soldered at a non-right angle with the board, which makes connecting other boards difficult or impossible. Tack down <u>one and only one</u> pin on each header.

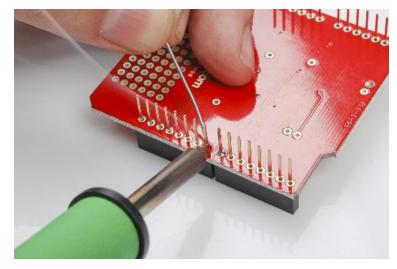


Now pick the board up. See how the headers stay in one place? That's great, because it's time to fit-check the thing. You can plug it into your Arduino board and see if goes in nicely; if not adjust any header that's at an inauspicious angle. To do that, hold the board as shown below and use your iron to melt the solder on the one pin that you tacked down earlier. Applying a little pressure with your forefinger on the female side of the header will cause it to sit flat on the board, most likely nice and perpendicular to the board. Make sure your fingers are not touching the pin you'll be heating!

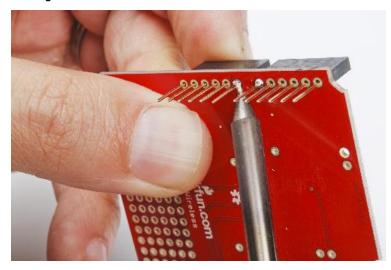


Once all four headers are nice and square, set the board down again and solder the other pins. It pays to start soldering pins as far from the singles that you tacked down earlier as possible; that way, you won't accidentally melt the first one and cause the header to go all wobbly again before it's secured.

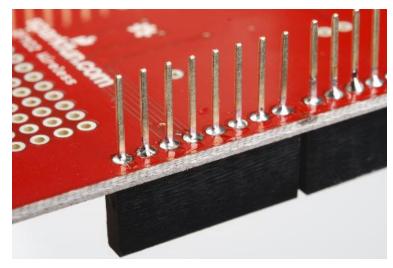


Next, you'll need to attach the piece of wire we've provided to the board. It will function as a 1/4 wavelength whip antenna; the radio module won't work properly without it. Start by stripping about 1/8" - 1/4" (3-6mm) of insulation off the end of the wire and threading the stripped portion up through the antenna hole as pictured below. Solder the wire to the pad as you would any other connection.

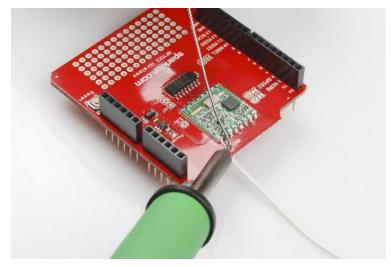

Once the wire is soldered in place, measure 8.3cm (3 1/4 inches) of wire from the underside of the board and snip off the excess. This tunes the antenna to 1/4 of the wavelength of the transmit/receive frequency (910MHz), which gives the best performance/size tradeoff.

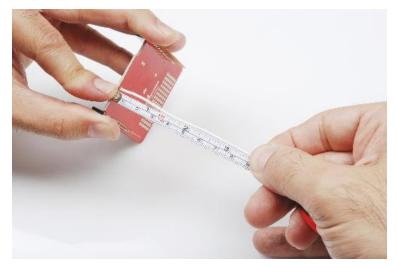

Now thread the antenna back up through the strain relief hole and out the top of the board. You're done!

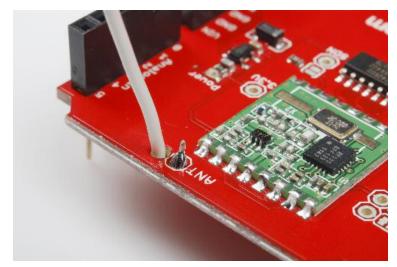

Using the RFM22 Shield:

The RFM22 device is a little more complex than other "virtual wire" type wireless solutions. Fortunately, Mike McCauley has written a good library for the Arduino which can be downloaded here. Once you've downloaded the file, extract the archive and install it for Arduino by copying it into the "Libraries" subdirectory in your Sketchbook folder. You may have to create a "Libraries" directory. Find the Sketchbook location by checking in the "Preferences" window in the Arduino IDE; once you've placed the library in the directory, restart the IDE and you should see the "RF22" option under the "Import Library..." sub-menu in the "Sketch" menu.

Preferences	
Sketchbook location:	
C:\Dropbox\Arduino Sketchbook	Browse
Editor language: System Default	 (Requires restart of Arduino)
Editor font size: 10 (requires restart of A	arduino)
Show verbose output during: 🔲 compilation	sketchbook
Verify code after upload	location!
Use external editor	
Check for updates on startup	
Update sketch files to new extension on sa	ave (.pde -> .ino)
📝 Automatically associate .ino files with Ardu	lino
More preferences can be edited directly in the C:\Users\%USERNAME%\AppData\Roaming\A	
(edit only when Arduino is not running)	OK Cancel
sketch_aug14a Arduino 1.0.1	_ 0 ×
Edit Sketch Tools Help	
Verify / Compile Ctrl+R	Ø
sketch Show Sketch Folder Ctrl+K	
Add File	
Import Library 🕨	EEPROM
	Ethernet
	Firmata
	LiquidCrystal
	SD
	Servo
	SoftwareSerial
	SPI
	Stepper Wire
	Contributed
	AlphaNumeric_Driver
	Editedfor101
	EthernetBonjour
	EthernetDHCP +
	EthernetDNS
	i2cmaster
	IRremote
	mbMotor
	NewSoftSerial
	Nunchuck ² on COM23
	RF22
	TinyGPS10
	TrueRandom
	Twitter
	WiFly

The library comes with a number of good examples; for our purposes here, we'll load the simplest ones: the "rf22_client" and "rf22_server".

File Edit Sketch Tools Help			
New Open Sketchbook	Ctrl+N Ctrl+O		
Examples Close Save Save As Upload Upload Upload Using Programme Page Setup Print Preferences Quit 1	Ctrl+W Ctrl+S Ctrl+Shift+S Ctrl+U Ctrl+Shift+P Ctrl+P Ctrl+Q Ctrl+Q	01.Basics 02.Digital 03.Analog 04.Communication 05.Control 06.Sensors 07.Display 08.Strings 09.USB(Leonardo) ArduinoISP AlphaNumeric_Driver Editedfor101 EthernetDHCP EthernetDNS IRremote Nunchuck TinyGPS10 TrueRandom Twitter WiFly Ethernet Firmata LiquidCrystal SD Servo SoftwareSerial Stepper	IPGateway rf22_client rf22_datagram_client rf22_mesh_client rf22_mesh_client rf22_mesh_server2 rf22_mesh_server3 rf22_reliable_datagram_client rf22_router_client rf22_router_server1 rf22_router_server2 rf22_router_server3 rf22_router_server3 rf22_router_server3 rf22_router_server3 rf22_router_server3 rf22_router_server3 rf22_router_server3 rf22_server rf22_server rf22_snoop rf22_specon rf22_test

Before we go any further, I want to point out that the more complex classes of the RFM22 module- RF22Datagram, RF22ReliableDatagram, RF22Router and RF22Mesh- are known to run poorly or not at all on ATmega328P based Arduino-compatibles (UNO, Pro, ProMicro, Duemilanova, etc) and <u>none</u> of the RF22 library support works on ATmega168 based boards (although those are only the very oldest of boards). At the time of this writing, support for Leonardo and other 32u4 based Arduino-compatibles (e.g., SparkFun's Promicro boards) has not been verified. Support is in place for Arduino Mega boards, however.

Okay, now that I've gotten that warning out of the way, let's go ahead and load up "rf22_client" and see what happens.

ക COM31		
		Send
benaring bo tike_server		FOR
No reply, is rf22_server running?		^
Sending to rf22_server		
No reply, is rf22_server running?		
Sending to rf22_server		
No reply, is rf22_server running?		
Sending to rf22 server		
No reply, is rf22 server running?		
Sending to rf22 server		
No reply, is rf22 server running?		
Sending to rf22 server		
No reply, is rf22_server running?		
Sending to rf22 server		=
No reply, is rf22 server running?		-
Sending to rf22_server		-
Autoscroll	No line ending 🚽 🔋	600 baud 🖌 🚽

If there had been a failure of the RFM22 module, we'd see a complaint in the Arduino Serial Monitor (making sure the baud rate is set to 9600). As it is, the "No reply, is rf22_server running?" message lets us know that the sketch is running correctly, the library compiled properly and the module is communicating properly with the Arduino. Unplug this Arduino and plug in another one, with another RFM22 shield attached to it, and load the "rf22_server" sketch onto that board. Launch the Arduino Serial Monitor, and you'll note that there's no traffic at all. That's as should be; the sketch only prints messages received from an "rf22_client" device. Now plug in the other Arduino, the one that you already install "rf22_client" on, and watch what happens in the Serial Monitor window.

		Send
Sent a reply		
got request: Hello Wo	rld!	
Sent a reply		
got request: Hello Wo	rld!	
Sent a reply		
got request: Hello Wo	rld!	
Sent a reply		
got request: Hello Wo	rld!	
Sent a reply		E
got request: Hello Wo	rld!	
		-

As soon as the new Arduino comes online- not more than a couple of seconds- you'll see a message start scrolling by indicating that the message "Hello world!" was received, and that a reply was sent. If you open the Serial Monitor to the "rf22_client" board, you'll notice a similar message:

				Send
	And hello back	to	уоц	-
got reply:	And hello back rf22 server	to	you	
got reply:	And hello back rf22 server	to	you	
got reply:	And hello back	to	You	
got reply:	rf22_server And hello back rf22 server	to	you	E

That message displays the text returned from the board programmed with the "rf22_server" example. Thus, these two examples show how to pass data back and forth between two devices and how to respond when a message has been received. For more information, check out the library webpage.

Important Legal Information:

The RF22 library downloadable from our site configures the RFM22 to operate at 910MHz. This is okay in the US and some other countries, but before you make extensive use of it in projects, <u>please</u> check your local regulations to ensure that it is not interfering with other local radio services. Note that the RF22 library as downloaded from the library webpage at open.com.au configures the device to transmit at 433MHz, which is not a generally acceptable frequency for use in the United States.

Next steps: