


SHEET 2.1

THE FTEC-30114-104 IS A FERROFLUID DAMPED RECEIVER. THE AMPLITUDE OF PEAK #2 OF THE RESPONSE CURVE IS +4 dB RELATIVE TO THE SENSITIVITY AT 500 Hz UNDER CONSTANT VOLTAGE DRIVE CONDITIONS. THIS UNIT IS A BALANCED ARMATURE RECEIVER INTENDED FOR USE IN BTE HEARING AIDS, AND IS 1/2 THE SIZE OF AN EF RECEIVER.

### CONSTANT VOLTAGE DRIVE CONDITIONS

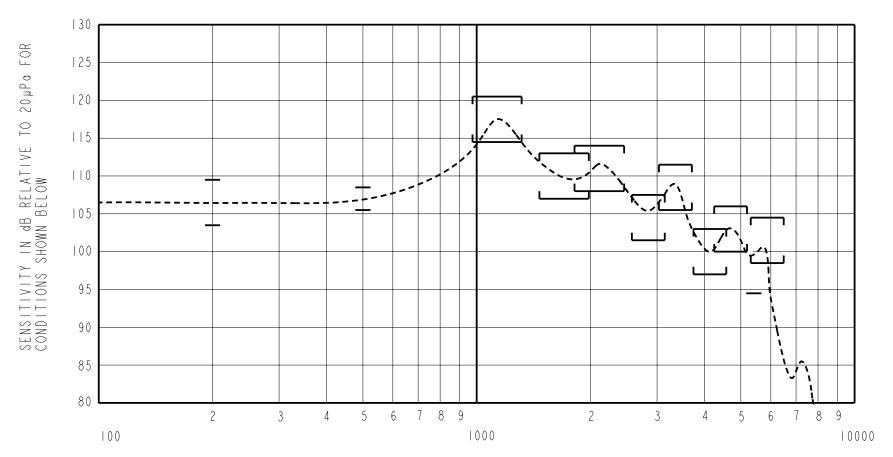

#### FREQUENCY IN HERTZ

#### **ACOUSTICAL**

SENSITIVITY DEVICE WILL PRODUCE THE SPL LISTED BELOW UNDER TEST CONDITIONS DESCRIBED IN TABLE 3. NOMINAL SENSITIVITY AT 500 Hz IS dB RELATIVE TO 20μPα. ALL OTHER VALUES IN dB RELATIVE TO THE SENSITIVITY AT 500 Hz.

FREQUENCY (Hz)	MINIMUM	NOMINAL	MAXIMUM
200	-3.5	-0.5	+2.5
500	-1.5	107.0	+1.5
975-1315	+7.5	+10.5	+13.5
1465-1980	0	+3.0	+6.0
1815-2455	+   . 0	+4.0	+7.0
2575-3145	-5.5	-2.5	+0.5
3035-3710	-1.5	1.5	+4.5
3745-4575	-10.0	-7.0	- 4 . 0
4250-5190	- 7	- 4	-
5412	-12.5		
5310-6490	-8.5	-5.5	-2.5

TABLE I

#### **ELECTRICAL**

DC RESISTANCE	22 OHMS ± 10%
IMPEDANCE @ 500 Hz	30 OHMS $\pm$ 15%
INDUCTANCE @ 500 Hz	7.2 mH $\pm$ 15%
CAPACITANCE @ 10 MHz	9.0 pF ± 20%

TABLE 4

ISOLATION: CASE WILL BE ELECTRICALLY ISOLATED FROM THE COIL CIRCUIT.

## RED CONTROLLED

TOTAL HARMONIC DISTORTION DEVICE WILL NOT EXCEED TOTAL HARMONIC DISTORTION LEVELS LISTED BELOW.

FREQUENCY (Hz)	AC DRIVE (V rms)	DC BIAS (mA)	LIMIT (%)
382	0.109	0	5
573	0.109	0	5
573	0.218	0	10

TABLE 2

MECHANICAL PORT LOCATION: IIS SOLDER TYPE: SAC305

TEMPERATURE

PERFORMANCE SPECIFICATION

OPERATING RANGE FROM 0°C TO 63°C (SENSITIVITY WILL NOT VARY BY MORE THAN  $\pm 3$  dB WITHIN RANGE SENSITIVITY AT 0°C IS 2 dB LOWER THAN THE SENSITIVITY AT ROOM TEMPERATURE DELTA PEAK IS I dB HIGHER AT BODY TEMPERATURE (37°C) STORAGE RANGE FROM -40°C TO 63°C

SHT 2.1

APP. BY

5-30-07


### TEST CONDITIONS


1201 CONDITIONS	
NOMINAL SOURCE VOLTAGE	0.109 V rms, TO DELIVER 0.35 mVA AT 500 Hz
SOURCE IMPEDANCE	< I Ohm
TUBING	8mm X 1mm 1D + 28mm X 1.5mm 1D EAR HOOK SIMULATOR + 25mm X 2mm 1D TUBE + 18mm X 3mm 1D TUBE
COUPLER CAVITY	2 cm <sup>3</sup> SIMULATED ANSI S3 7 TYPE HA-3 (IEC 126)

TABLE 3

Revision	C.O. #	Implementation Date	RELEASE LEVEL		REVISION
В А	C10107383 C10105843	4 - 2 - 08 5 - 29 - 07	Active		В
CRITERIA, CORRELATION OF TEST EQUIPMENT WITH KNOWLES IS ALSO REQUIRED FOR ELIMINATION OF EQUIPMENT AND TEST METHOD VARIATION				DR. BY  MMM  CK. BY	DATE 5 - 29 - 07 DATE
TITLE:	RE	CEIVER	FTEC-30114-104	GJP	5 - 30 - 07

## **KNOWLES ELECTRONICS** ITASCA, ILLINOIS U.S.A.

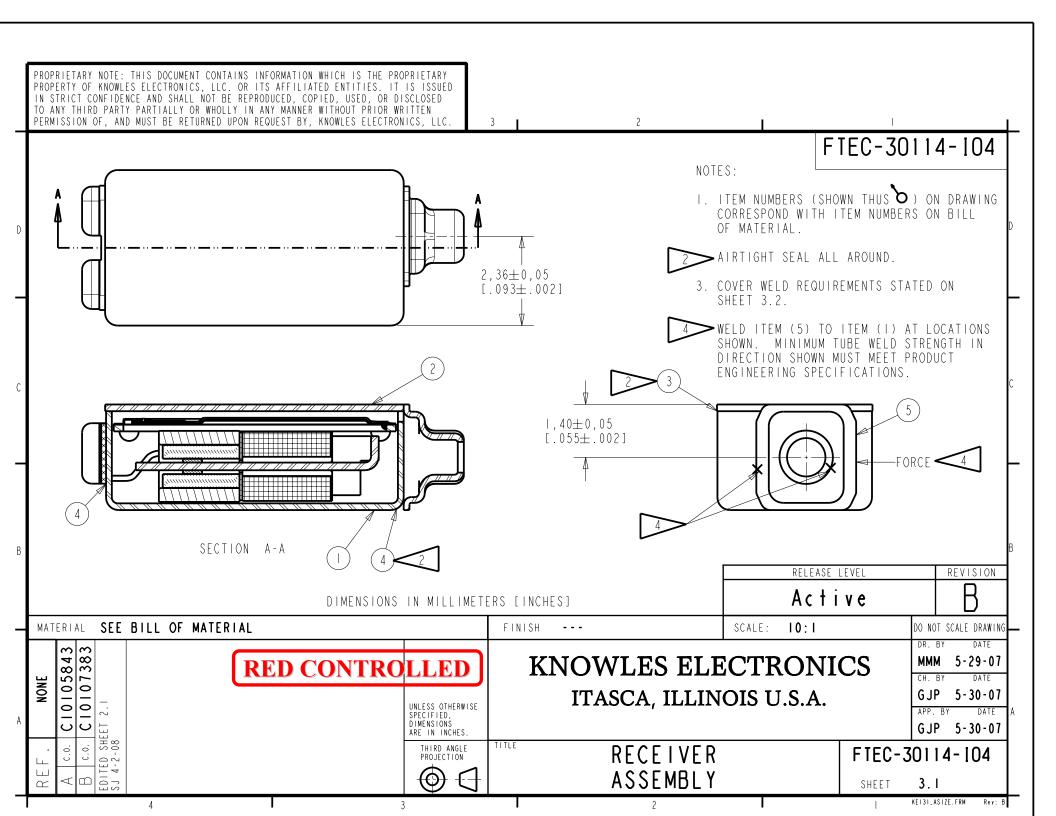

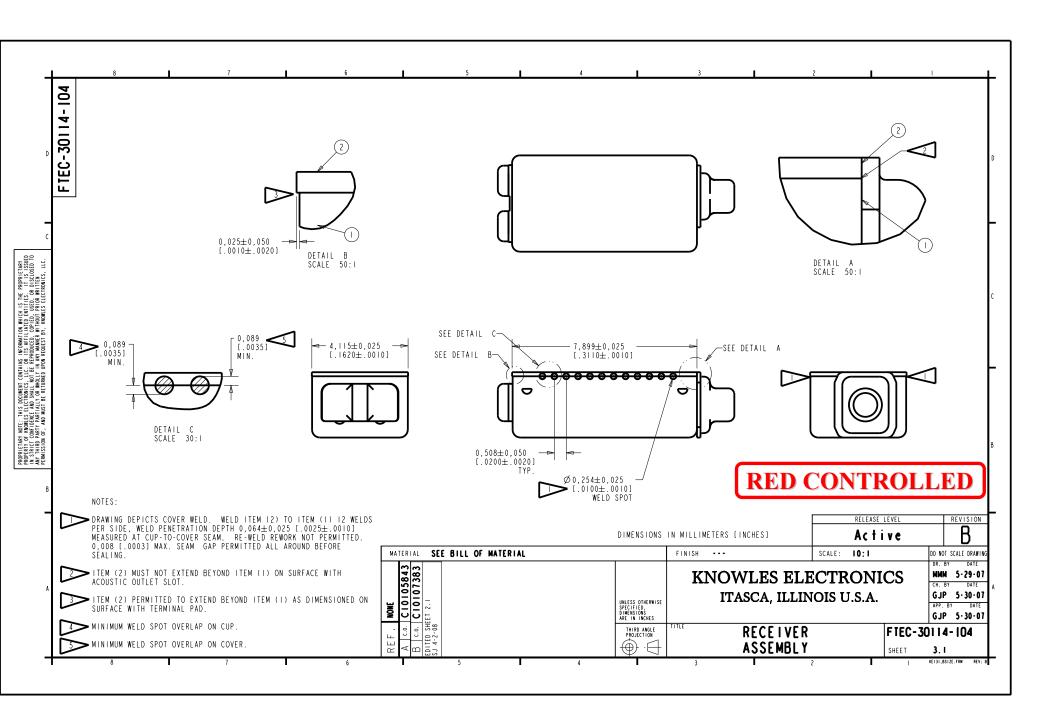

FTEC-30114-104		
Sheet 4.1	ITASCA, ILLINOIS U.S.A.	Sheet <b>4.</b> I
By Date Dr. MMM 5-29-07 Ch. GJP 5-30-07 App. GJP 5-30-07	RECEIVER ASSEMBLY	Release Level  Active
COL. I	2 3	4 0 0
Part or Dwg. no.	Tot. Req. Nomenclature:	Applicable Specs © 0 C Remarks
FTEC-102-400	MOTOR, CUP, FERROFLUID & DIAPHRAGM ASSEMBLY	
TEC-015	I FLAT COVER	2 2
13-092-130101	A/R CEMENT	3 3
13-092-130203	A/R CEMENT	4 4
TEC-018	I TUBE ASSEMBLY	5 5

# RED CONTROLLED

REVISION
A c.o. C10105843
B c.o. C10107383
EDITED SHEET 2.1
SJ 4-2-08

FTEC-30114-104 Sheet 4.1

PROPRIETARY NOTE: THIS DOCUMENT CONTAINS INFORMATION WHICH IS THE PROPRIETARY PROPERTY OF KNOWLES ELECTRONICS, LLC. OR ITS AFFILIATED ENTITIES. IT IS ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED, USED, OR DISCLOSED TO ANY THIRD PARTY PARTIALLY OR WHOLLY IN ANY MANNER WITHOUT PRIOR WRITTEN PERMISSION OF, AND MUST BE RETURNED UPON REQUEST BY, KNOWLES ELECTRONICS, LLC.

FTEC-30114-104	
SHEET 5 I	

## PRODUCTION TEST INFORMATION

SOFTWARE REVISION PCI/GPIB FCART	SOFTWARE 4 13 MIN
HARDWARE REVISION PCI FCART	KE 1065D.004 MIN.
HARDWARE REVISION GPIB FCART	KE 1065C.008G MIN.

# RED CONTROLLED

TITLE:

Revision	C.O. #	Implementation Date	RELEASE LEVEL	REVISION
				0
В	C10107383	4 - 2 - 08	Active	H
А	C10105843	5-29-07		נ

DATE 5-29-07

DATE 30-07

**KNOWLES ELECTRONICS** ITASCA, ILLINOIS U.S.A.

WHEN TEST LIMITS ARE USED TO ESTABLISH INCOMING INSPECTION ACCEPTANCE/REJECTION PR. BY CRITERIA, CORRELATION OF TEST EQUIPMENT WITH KNOWLES IS ALSO REQUIRED FOR MMM

			CK. BY	DATE
:	RFCFIVFR	FTEC-30114-104	GJP	5 - 30 - 07
	NECLIVEN	1 120 30114 104	APP. BY	DATE
	PERFORMANCE SPECIFICATION	SHT 5 I	GIP	5 - 30 - 07